powerlouvre®

by breezway

Welcome

Here is a quick tutorial to show you around the Powerlouvre™ Advance App

Lets get started...

Contents

powerlouvre®
by breezway

Pairing the Apptivate® Advance Control Unit to your smart phone
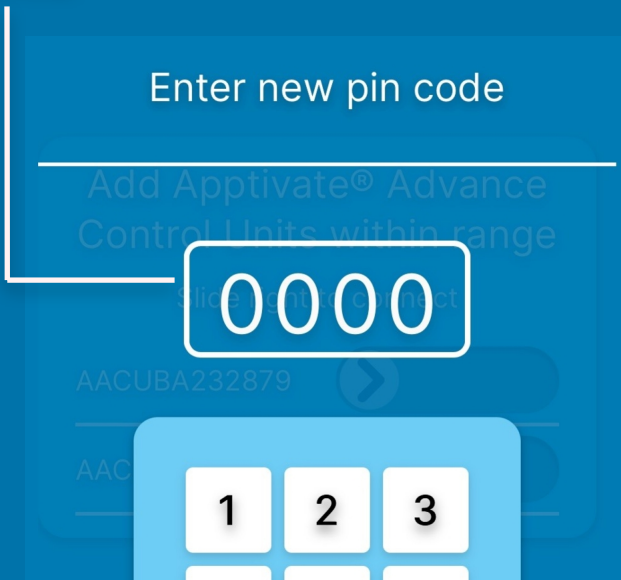
This App will detect and display all control units within a 10 metre range.

1. Slide the toggle switch right for each Control Unit you wish to connect to this smart phone.

i powerlouvre®
by breezway

Add Apptivate® Advance Control Units within range

Slide right to connect

New Control Unit ❯

New Control Unit ❯

New Control Unit ❯
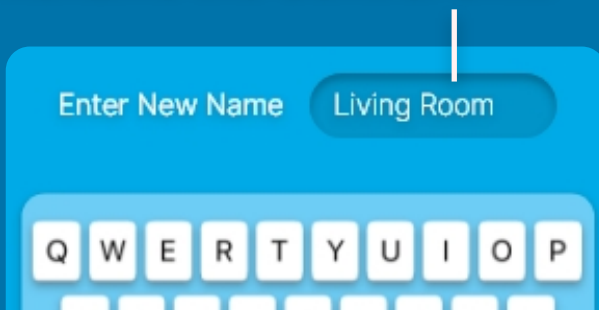
powerlouvre®

by breezway

Pairing the Apptivate® Advance Control Unit to your smart phone

2. On connection, enter the factory default, 4 digit pin code 0000 to access to the Control Unit.
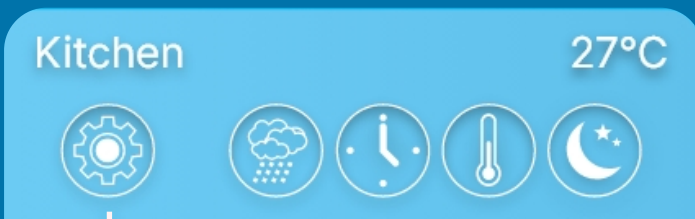
Enter new pin code

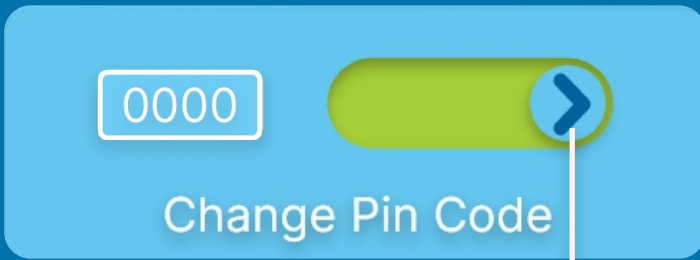Add Apptivate® Advance
Control Units within range

AACUBA232879

AAC

0000

| 1 | 2 | 3 |

3. Rename the Control Unit.

Enter New Name   Living Room

| Q | W | E | R | T | Y | U | I | O | P |

powerlouvre®
by breezway

Controlling your Powerlouvre™ Windows

On/Off Toggle for Automatic Features

Control Unit Name

Room Temperature

Kitchen   27°C

Open   Mid   Close

Control Unit Settings

Louvre Position Control

powerlouvre®
by breezway
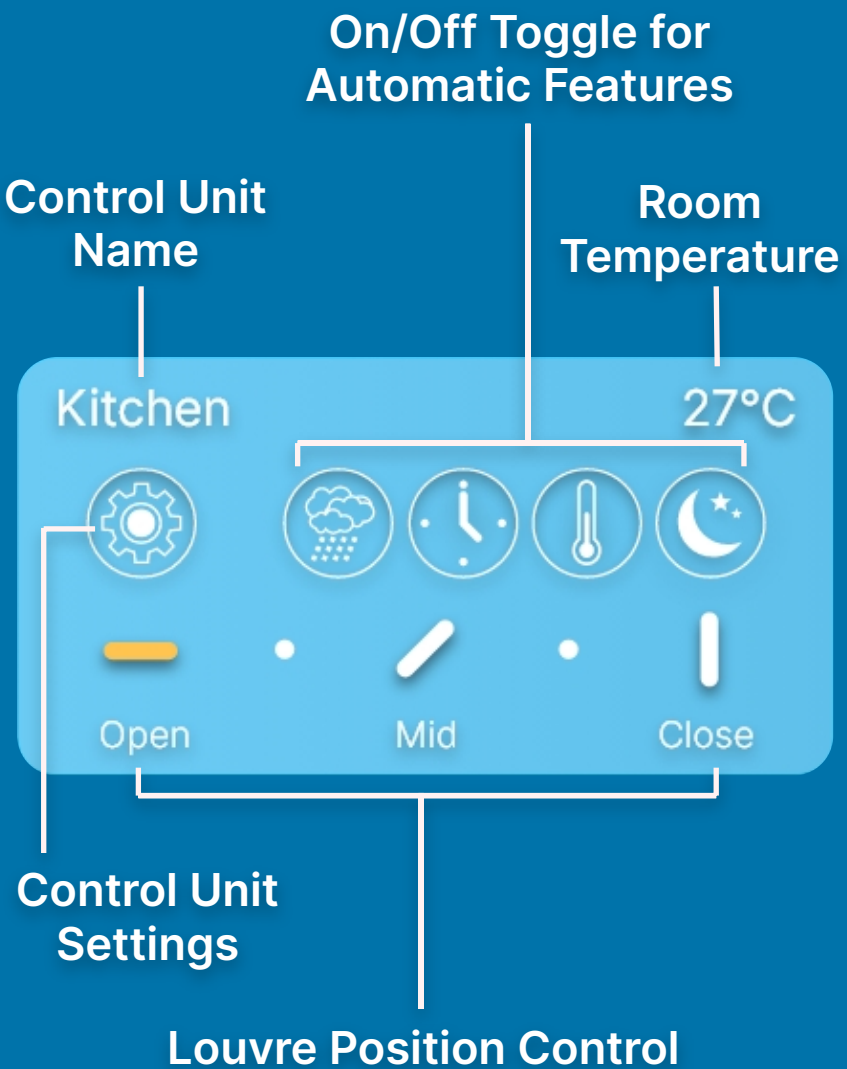
Changing the Security Pin Code

Kitchen   27°C

1. Tap the Control Unit settings.

0000   Change Pin Code

2. Slide toggle switch right to enter new code.

Enter new pin code

1 2 3 4

1 2 3
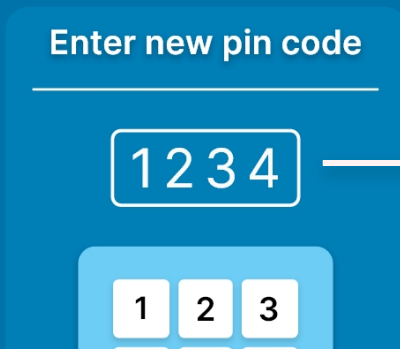
3. Enter new security code.

powerlouvre®
by breezway

Disconnecting an Apptivate® Advance Control Unit

1. Drag tile to the left of the screen. A trash bin icon will appear.

OPEN ALL   CLOSE ALL

om   27°C

Mid   Close

Bathroom   27°C
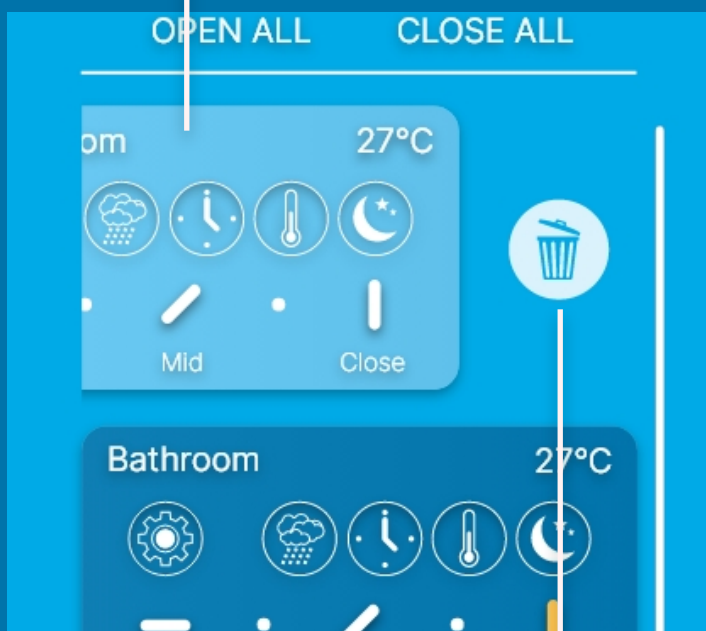
2. Tap the trash bin icon to un-link the Control Unit.

powerlouvre®
by breezway

Resetting the Apptivate® Advance Control Unit

1. Using a small flat head screwdriver, lever off the front cover of the Control Unit.

powerlouvre®
by breezway
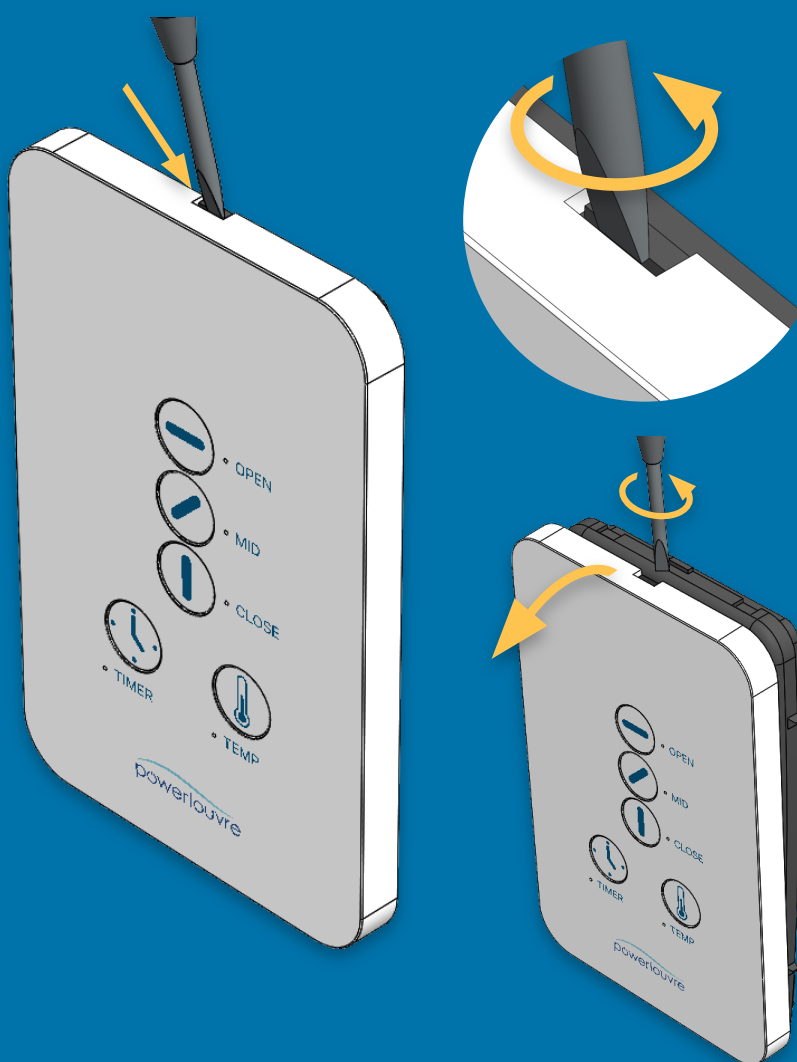
Resetting the Apptivate® Advance Control Unit

2. To reset the pin code, press and hold down the reset button for 5 seconds until the LED's flash twice. The code will reset to 0000.
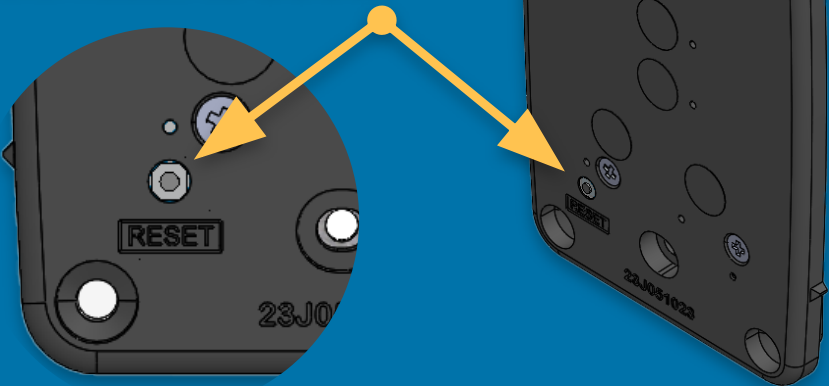
3. To perform a factory reset, press and hold the reset button for 10 seconds. The LED's will begin to flash continuously to confirm the factory reset procedure has begun. The LED's will stop blinking once the factory reset is complete.

NOTE: This will delete all user settings and revert any updates back to factory settings.